
THE CLEANCUT

ULTRA-LOW

SIZING & MEASUREMENT GUIDE

The Ultra-Low is designed to fit high-profile tubs. If the tub is less than 14.75 inches tall on the outside & inside of tub, please take a look at the Step or Deep Step sizing guides.

TUB REQUIREMENTS:

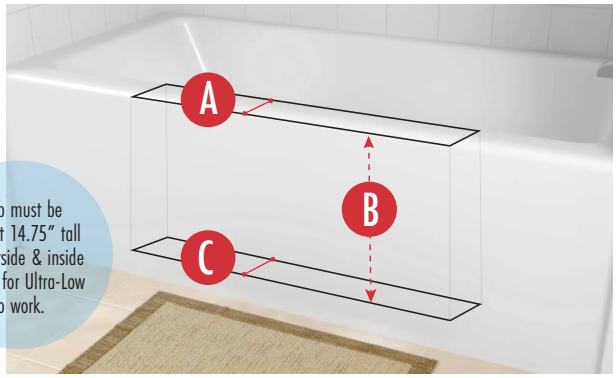

*Tub must be at least 14.75" tall (on outside & inside of tub) for Ultra-Low to work.


A *Max* Tub-Wall Width at Top:* **6"**

B *Bottom Width Measure Depth:* **14.75"**
Distance to measure down from top of tub to establish "Max Tub-Wall Width at Bottom"

C *Max Tub-Wall Width at Bottom:* **7.25"**
Note: *Bottom tub width is typically wider than top width.*

*IF YOUR TUB EXCEEDS THESE MAX SIZE MEASUREMENTS, **THIS PRODUCT WILL NOT WORK WITH YOUR TUB.**

TEMPLATE (CUT LINES) AND PRODUCT OVERLAP MEASUREMENTS:

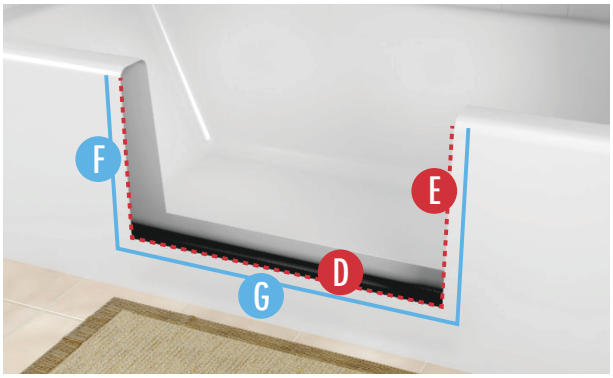

D *Template Length:* **25.5"**


E *Template Height:* **14"**

AMOUNT PRODUCT OVERLAPS PAST CUT LINES:

F *Left and Right Side Overlap:* **1.5"**

G *Bottom Overlap:* **0.50"**

ACTUAL PRODUCT MEASUREMENTS:

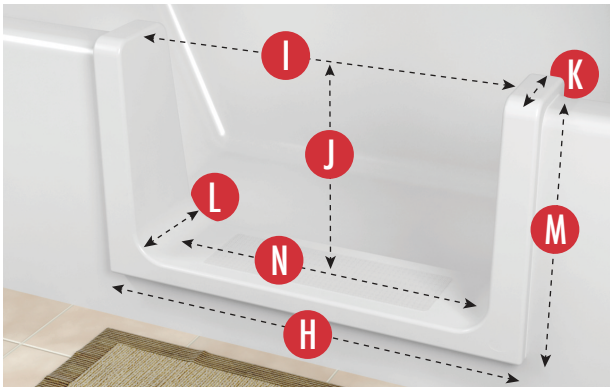

H *Product Length:* **28"**

I *Opening Left to Right at Top:* **24.25"**

J *Product Opening Top to Bottom:* **13.75"**

K *Product Width at Top:* **7"**

L *Product Width at Bottom:* **8.25"**

M *Product Height:* **15.75"**

N *Opening Left to Right at Bottom:* **20.75"**

Sizing & Install Videos can be viewed at www.cleancutbath.com/sizing-how-to